




Gardiner Technology
Gardtec 500 Series User Manual

Operating Gardtec 500

To alleviate any possibility of error, always insert 0 (zero) in front of a user code entry.

0 (zero) should not be used as part of a user code.

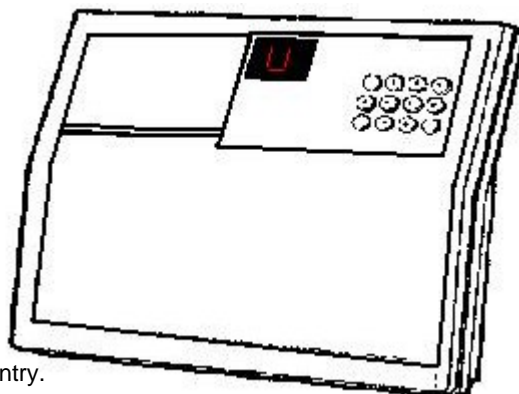

Function	Action	Result	Display
To Set System	Enter User Code	Exit sounder commences continuous tone during exit time	1 st 2 nd U -
To Unset System	a) Enter premises via entry route b) Enter User Code	Entry sounder starts intermittent tone Entry sounder silences	- U
Isolating Zones (ie night set or garage set) NB:- After unsetting the system after zone omits the display will identify the zones omitted during the last setting	Enter User Code followed by * and zone number. (for multiple zone omits enter code - * zone no * zone no etc)	Exit sound starts continuous tone for duration of exit time	1 st 2 nd h -
Changing the User Code NB:- Remember not to use a 0 (zero) as part of a code	a) Enter the user code b) Enter *9 followed by the new code c) Press 0 (zero) to clear display	a) Exit sounder starts b) Sounder silences and display shows the new code in sequence followed by U c) Panel returns to unset	U ? ? ? ? U U
Chime Function (for walk testing detectors or identifying area movement) To remove chime function press 0 (zero)	Enter 0 # 6	Movement through any detector while system is unset creates a 2 second tone	U
Sounder Test	Enter 0 # 9	External sounder & strobe will sound for 10 seconds followed by internal sounder for 10 seconds	U
To Read Event Log (last 13 events)	Enter 0 # 8	Display will scroll through last 13 events of activation	1 2 3 4 5 - - - - 13 ? ? ? ?
To Clear Display	If the display scrolls between U (unset) and any zone information press 0 (zero) to clear after investigating cause of activation)		U
Quick Set Option	Enter 0 # 4	Normal set procedure	